



Wet System flat mop Microriccio

Microfibre flat mop looped end with polyester support



Technical information

code	notes	cm (comm. sizes)	cm (real sizes)	C	pcs	kg	m ³
00000694		↙ 40 ↘ 14	↙ 44 ↘ 14,5	□	25	4,54	0,019
OR000694MR		↙ 40 ↘ 14	↙ 44 ↘ 14,5	■	25	4,41	0,019
OB000694MB		↙ 40 ↘ 14	↙ 44 ↘ 14,5	■	25	4,41	0,019
OV000694MV		↙ 40 ↘ 14	↙ 44 ↘ 14,5	■	25	4,41	0,019
OG000694MG		↙ 40 ↘ 14	↙ 44 ↘ 14,5	■	25	4,41	0,019

SYSTEM

Flat mop system with flaps, to be used with roll, jaw or flat wringer
Ideal for any surface and for particle dirt thanks to the high dirt collection power of yarn and microfibre

GREEN BOX



DECITEX of the fibres
Microfibre: 0,58 DTX



Efficient: microfibre requires less chemical to remove dirt and bacteria, reducing water and chemical consumption

Analysis

The analysis of the mechanical action of the Microriccio mop revealed a removal of Coronavirus 229E from steel surfaces of 99.9% (test conducted by a specialised external laboratory)
The analysis of code 00000694 revealed a removal of up to 98.79% of the bacteria present on the surface (test conducted by a specialised external laboratory)



Advantages

- **Time-saving:** thanks to the large cleaning surface and the possibility of reaching corners and cleaning under furniture
- **Ergonomic:** lightweight, it reduces operator's strain
- **Highest hygiene:** microfibre penetrates into the microporosity of the floor, collecting dirt and more than 95% of bacteria

Material

Yarn: microfibre (80% polyester, 20% polyamide) - Support: polyester

Washing conditions

Guidelines for proper fibre maintenance

Follow the washing instructions (temperatures and dosage) on the laundry detergent packaging
 Perform a pre-wash in cold water without laundry detergent to remove any residual product used during cleaning operations
 Recommended use of professional textile laundry detergent
 Do not use fabric softener
 Do not use laundry detergents with Ph > 11
 The use of laundry nets is recommended to speed up and make laundry operations more hygienic

Specific mop instructions



Washing temperature max 90° C, recommended 60°




Bleaching possible, do not use chlorine



Tumble dry or in a dryer possible with low program

Related products

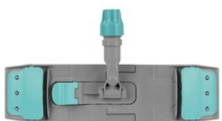

Wet System Light frame



Telescopic handle



Action Pro Dry



Dry wringer



12/10/23

Product options



Wet System flat mop Microblue